

focX® - Handheld GSM-R

Document No: **1405.110.20001.BA.EN.8**
Version: 1.0.1
Date created: 2015-06-09

User Interface

Emergency Button

Initiating a GSM-R emergency call.

Rotary Knob

- serial jumping through the menus
- menu selection function by pressing
- high-low volume function

LAS Transmitter

Press to activate transmission of the link assurance signal.

High / Low Volume Rocker Switch

For adjusting the loudness separately for the handset (earphone) and hands-free function.

PTT (Push-to-Talk Button)

Press and hold to send. Release to receive. PTT is only available if you use semi-duplex in GSM-R or FM mode. (dualfocX®).

Accept- / Send Button

Initiating or accepting a call.
Open the „fixed“ submenu.

Antenna 450 - 470 MHz (dualfocX®)

2-line Status Display

power indicator | battery status | selected menu | Time

Footer

Softkey function | selection button left and right-hand


Exit Button

To end or rejecting a call. To switch on and off (keep button pressed for 3-4 seconds).
In the menu :
- return to the initial state
- delete button for the last entered number



Softkey Function

Default settings:

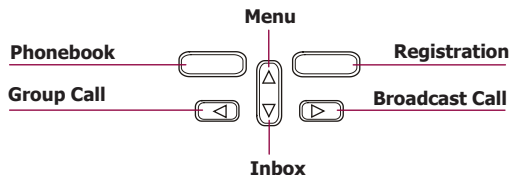

» To change the assignment of the softkeys open the menu **Settings > General > Chg. SK Funct..**

Connections



Antenna Interface


For connecting the screw-on antenna (only for dualfocX®).

12 pin Interface

Connecting an accessory

Battery Release

For unlocking the battery. The release buttons are attached to both sides of the battery.

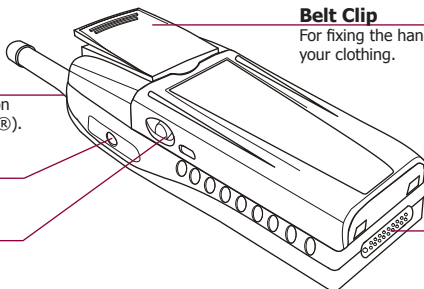

Belt Clip

For fixing the handheld, e.g. attaching it to your clothing.

Contact Strip

Contacts for connecting a data interface and the charger.

Switch on / off Handheld

Switch on:

- » Press the exit button.
The handheld is initialised after is switched on.
- » Enter the PIN code.
The PIN request only appears if the SIM card requires this.
- » Confirm with the left-hand selection button **OK**.


Switch off:

- » Press and hold down the exit button for 3-4 seconds.
- » Confirm with the left-hand selection button **Yes**.
The handheld disconnects the connection. The display and keypad lighting is switched off.
After a short time the handheld switches itself off.

Registered State



Switch off

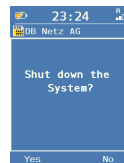

Pictograms in the Display Field

Point-to-point Call

	Incoming point-to-point call		Point-to-point call is busy
	Setup of a point-to-point call		Connection is busy
	Existing point-to-point call		No point-to-point call is possible
	Point-to-point call is placed on hold		Point-to-point call failed
	Waiting point-to-point call		Call interrupt
	Emergency call		

Conference Call


	Incoming conference call
	Setup of a conference call
	Existing conference call
	Conference call failed
	Conference call is busy

Group and Broadcast Call

	Setup Group call
	Setup Broadcast call
	Incoming Group- / Broadcast call
	Waiting Group- / Broadcast call
	Existing Group- / Broadcast call
	Group- / Broadcast call failed

Setting up an Emergency Call

- » Press the emergency call button.
The emergency tone sounds max. 5 s.
- » Press the PTT button within 3 s.
If the PTT confirmation is not given, the display switches back to the previously used state.
- » Hold the handheld in your hand to speak and listen.
 - [1] Press and hold down the PTT button to speak.
 - [2] Release the PTT button to listen.

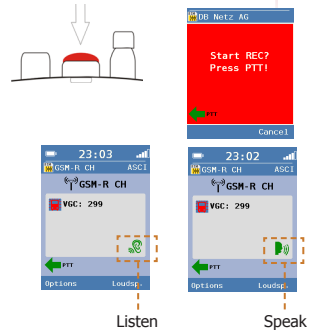

Setting up a Point-to-Point Call

Call on number dialled:

- » Enter the number to using the numbers block to the initial state.
- » Press the send button.
The connection is established. The display shows the call number and the dialling symbol.
- » Listen and speak like a conventional mobile phone.

Call from the phonebook:

- » Open the menu **Phonebook > Phonebook entry [x]**.
- » Select the entry.
- » Press the send button.
- » Listen and speak like a conventional mobile phone.

Note: Further function such as conference call and hold occurs during a call via the left-hand selection button **Options**.

Setting up a Group Call or Broadcast Call

Requirement:

A group call or broadcast call can only be triggered when a corresponding entry is located on the SIM card.

Group- and broadcast call from the phonebook:

- » Open the menu **Phonebook > Broadcast call > VGC [x] / VBC [x]**.
- » Press the send button.
The display shows the VGC / VBC and the dialling symbol.
- » Press down the PTT button to speak.
- » Release the PTT button after speech.
- » Press the exit button, to terminate the outgoing call.
The display shows the VGC / VBC and the derogation symbol.

Incoming Group Calls:

- The incoming group call is signalled by an attention tone.
- The incoming group call is signalled by an attention tone.
- » Press down the PTT button to speak.
 - » Release the PTT button after speech.
 - » Press the exit button, to terminate the call.
The display shows the group number and the derogation symbol.
The system switches back to the basic menu.