


INDOOR VIDEO
RECEIVER

FB00288-EN

CE

FC

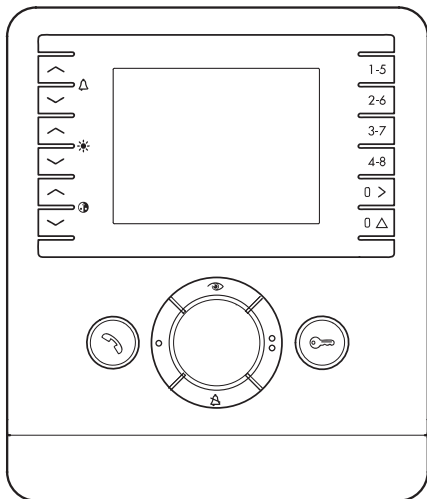











USER MANUAL

PEV

EN

English

Function of buttons

	Adjustment of ringtone volume (high-medium-off).
	Screen brightness control. The screen must be active.
	Colour saturation control. The screen must be active.
1-8	Internal call.
	Enables selection of indoor receivers 5-8 when pressed (green LED on). Sends a panic signal to the concierge. Press and hold until it beeps. The red LED confirms the signal has been received by the concierge. The LED stays on until the concierge calls the user back. The panic signal takes priority over all calls.
	Activates/deactivates communication (blue LED).
	Door lock release (blue LED). In systems designed to accommodate this signal, during a call from an entry panel, the LED light indicates that the door is open.
	Activates and selects the entry panel. This function is available only when the line is free.
	Auxiliary 1 (blue LED). The function may also be available when there is no active communication, where the system permits it.
	Auxiliary 2 / Concierge call (blue LED). The function may also be available when there is no active communication, where the system permits it.
	No ringtone/mute (blue LED). When the ringtone is disabled, the caller image still shows on the screen.


Only use soft, dry or slightly damp cloths to clean. Do not use any chemical products.

Decommissioning and disposal. Dispose of the packaging and the device at the end of its life cycle responsibly, in compliance with the laws in force in the country where the product is used. The recyclable components are marked with a symbol and the material's ID marker.


FC - This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

THESE INSTRUCTIONS MUST BE ENCLOSED WITH THE DEVICE. THE DATA AND INFORMATION IN THESE INSTRUCTIONS ARE TO BE CONSIDERED AS SUBJECT TO CHANGE AT ANY TIME AND WITHOUT THE NEED FOR ANY ADVANCE WARNING.


Standard functions

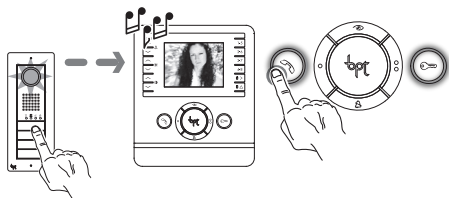


Answering a call.

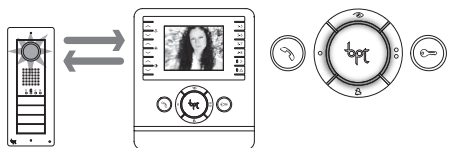


Communication activated.

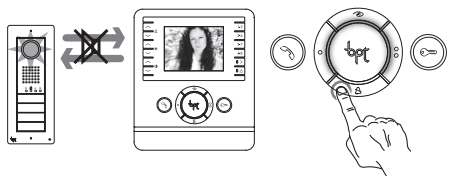

Interrupting audio with the entry panel.

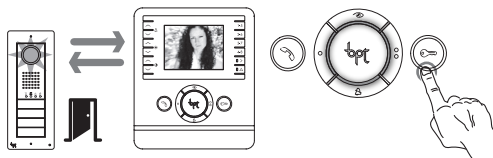


Opening the door of the entry panel that is calling.

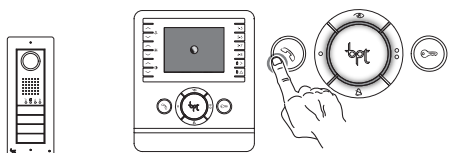



Ending the communication.



Self-connection

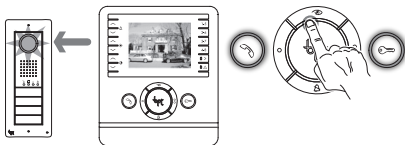


Press the  key to activate video communication with the entry panel.

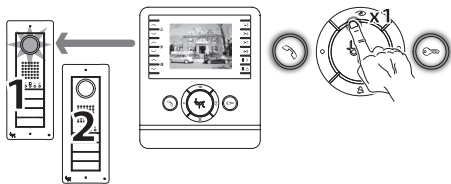


Where there is more than one entry panel, press the  key multiple times to show all the panels in succession.

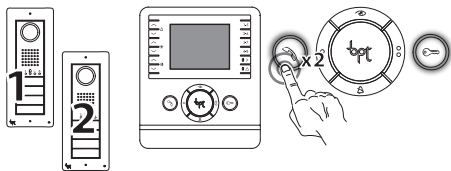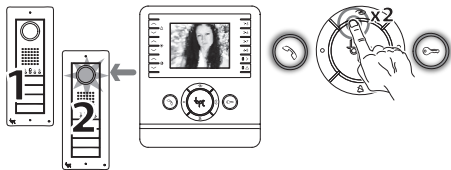


To end the communication, press the  key twice or wait for the communication to end automatically (max. 60 seconds).


When the device is in self-connection mode, you can: activate audio communication, open the door of the entry panel shown and activate auxiliary commands.


Video toggle

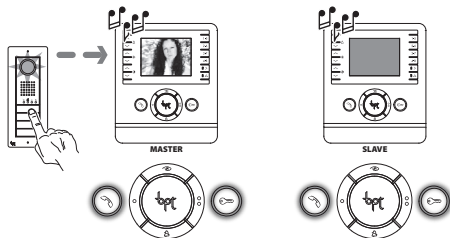

If two or more receivers have been configured to answer the same call, the preview image of the caller is shown only on the MASTER device(s).

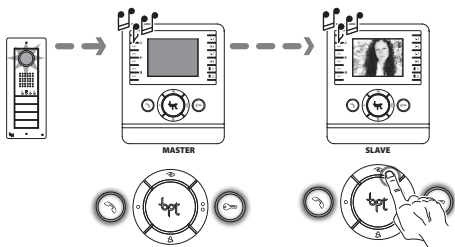


Press the  key to transfer the display to a SLAVE receiver, without activating the audio.

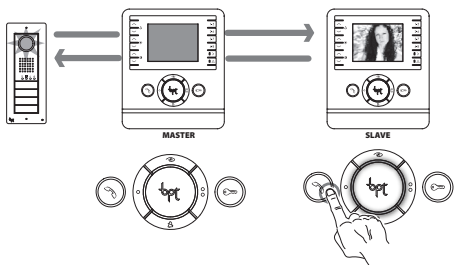

Press the  key to activate audio communication with the entry panel.

Intercom

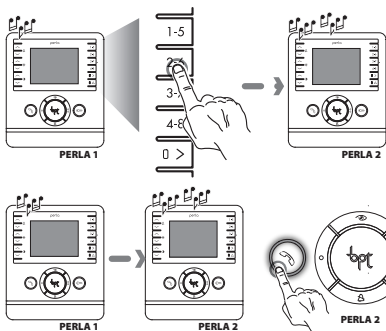


Select the desired indoor receiver. The calling receiver sounds the line-free tone and the called receiver rings with the chosen ringtone.


Press the  key on the receiver called to activate audio communication.

During a conversation between indoor receivers, a call from an entry panel is signalled to the receivers with a beep that is repeated every 5 seconds. If the green LED comes on for 2 seconds and beeps 3 times, calls cannot be made because the line is busy.

Call transfer

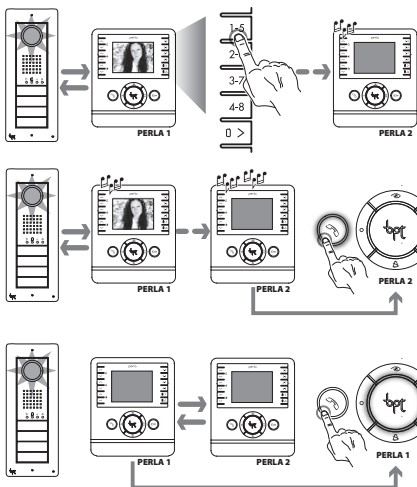

With a call active, select the internal receiver to which the call is to be transferred.


Press the  key on the receiver that is called to activate the audio communication.

Press the  key to transfer the call.

The indoor receiver receiving the call can retransfer it.

Call from concierge notification


☞ Function available only on systems with concierge desk.

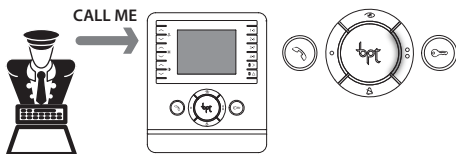

An unanswered call from the concierge desk is marked by the Aux2 LED lighting up ☺. The notification goes out when communication with the concierge begins.

Request for call to concierge


☞ Function available only on systems with concierge desk.

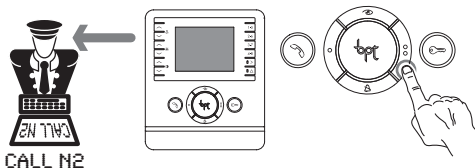

Pressing the Aux2 ☺ button sends a request for call back to the concierge.

Alarm signal

☞ Function available only on systems with concierge desk.

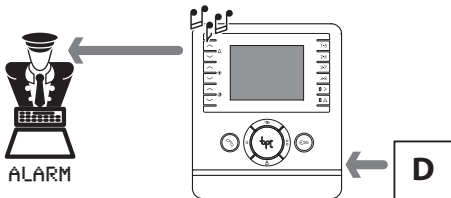

If an alarm is connected to the relevant input on the receiver, when the alarm is activated, an alarm signal is sent to the concierge and the receiver beeps intermittently for approximately 10 seconds.

CAME
safety & comfort



Came S.p.A.

Via Martiri Della Libertà, 15
31030 **Dossone di Casier**
Treviso - Italy

☎ (+39) 0422 4940

📠 (+39) 0422 4941

Via Comia, 1/b - 1/c
33079 **Sesto al Reghena**
Pordenone - Italy

☎ (+39) 0434 698111

📠 (+39) 0434 698434

www.came.com